

Water pump

Inspection

1. Remove the timing belt.
2. Check that the water pump pulley turns freely.
3. Check the signs of seal leakage.

NOTE: A small amount of "weeping" from the bleed hole is normal.

