

Radiator

Replacement

Fuel-Injected Engine:


WARNING System is under high pressure when engine is hot. To avoid danger of releasing scalding coolant, remove cap only when engine is cool.

Total Cooling System Capacity (Incl. heater, and reservoir tank):
5 M/T, 4 A/T: 7.8 liters (8.2 U.S. qt., 6.9 Imp. qt.)

NOTE:

- Check all cooling system hoses for damage, leaks or deterioration and replace if necessary.
- Check all hose clamps and retighten if necessary.
- Use new O-rings whenever reassembling.

RADIATOR
Refilling, page 5-64
Leak test, page 5-65
Inspect soldered joints and seams for leaks.
Blow dirt out from between core fins with compressed air.
If insects, etc., are clogging radiator, wash them off with low pressure water.

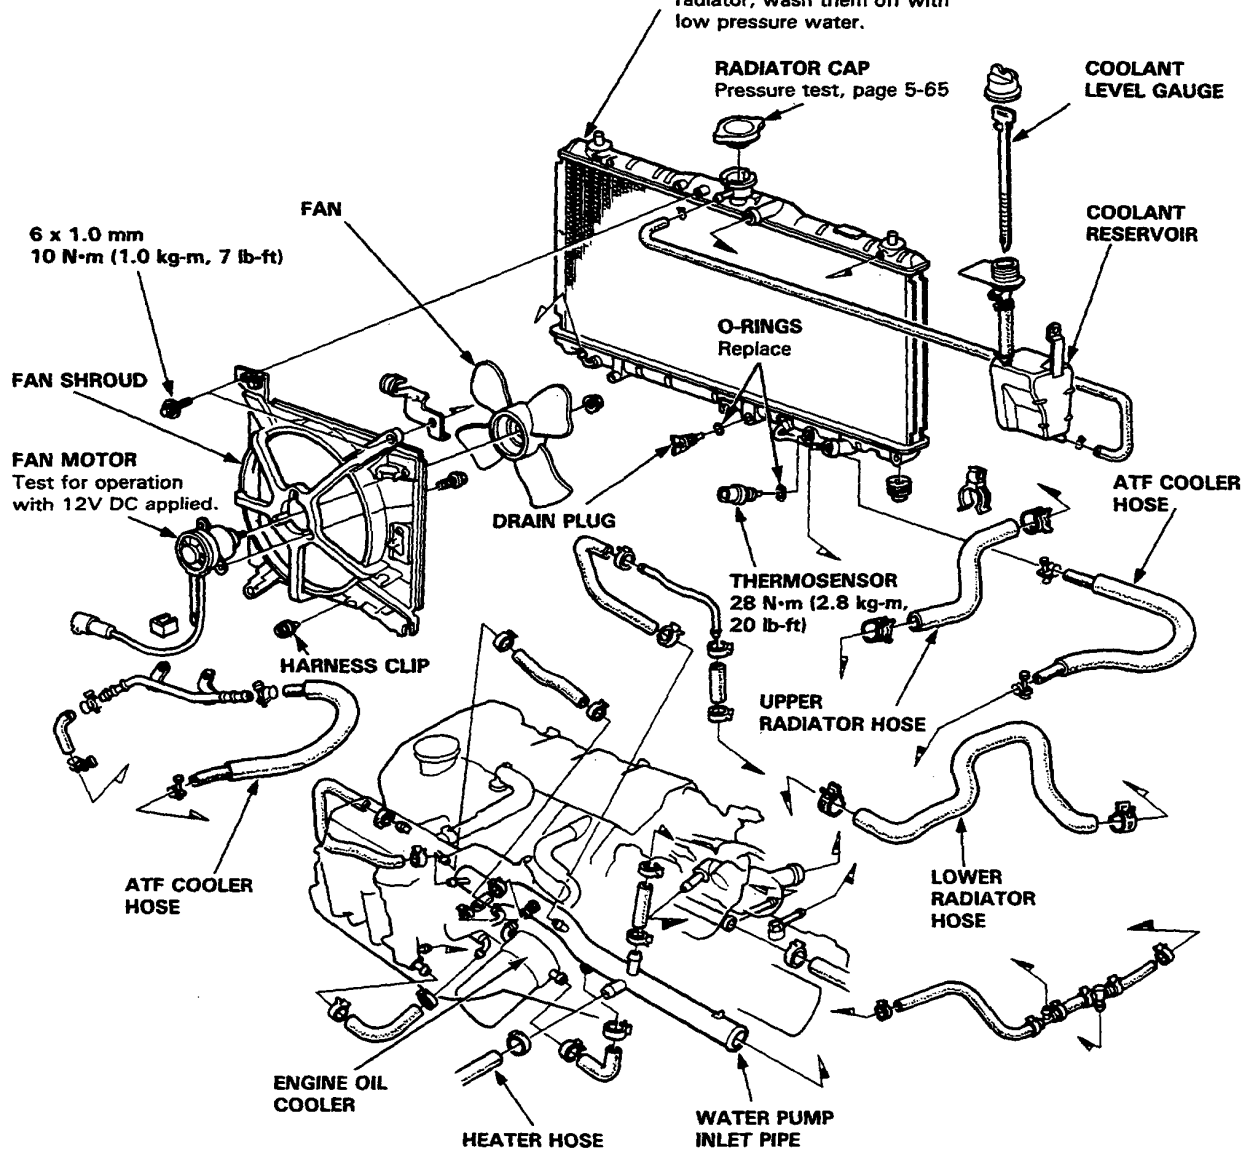



Carbureted Engine:

WARNING System is under high pressure when engine is hot. To avoid danger of releasing scalding coolant, remove cap only when engine is cool.

Total Cooling System Capacity (Incl. heater, and reservoir tank):

5 M/T: 6.8 liter (7.2 U.S. qt., 6.0 Imp. qt.)

4 A/T: 7.5 liter (7.9 U.S. qt., 6.6 Imp. qt.)

NOTE:

- Check all cooling system hoses for damage, leaks or deterioration and replace if necessary.
- Check all hose clamps and retighten if necessary.
- Use new O-rings whenever reassembling.

